

When setting up the TS-610 the RT-6100 screen will display "chart doesn't work" the SSC-100 needs to be set up to clear the error.

You'll need a cell phone with zoom

For Chart Selection on initial set up for the RT-6100 choose "SC-100 type M"

-On the RT-6100 from the Home Screen, press the "Arrow" key on the upper Left Corner.

-Press "Settings"

-Press "Parameter Settings for chart" then press "Yes"

You will see numbers 1-2-3-4

These will correspond the the Chart menu inside the SSC-100.

Using your cell phone zoom in on the menu so you can actually see it. You'll see 1-2-3-4 on the screen to control Up-Down-Sideways-Change.

-Using the buttons on the RT-6100 change the Chart Type to "M" and then select Exit.

You're Done!

